

DELIMING DISH MACHINE

(Aberdeen)

(Follow manufacturer's instructions)

*For optimum operation of machine, delime every other week, or as needed)

*An empty dish rack can be run through the machine during a deliming cycle to remove lime from the rack.

PROCEDURE

Put on heavy duty rubber gloves AND avoid splashing the caustic delimer.

With water in the bottom of the dishwasher, add 1 cup of delimer into the water and turn the machine to the delimer position and run machine for about 15-20 minutes.

Turn delimer switch off.

Drain the machine.

Fill machine to the line. Run 2 cycles to remove the delimer from the machine.