

DELIMING DISH MACHINE

(Huron)

(Follow manufacturer's instructions)

*For optimum operation of machine, delime every other week, or as needed)

*An empty dish rack can be run through the machine during a deliming cycle to remove lime from the rack.

PROCEDURE

Put on heavy duty rubber gloves AND avoid splashing the caustic delimer. With water in the bottom of the dishwasher, add 1 cup of delimer into the water and flip switch to "delime". Run machine for about 5 minutes.

Shut delimer switch off. Flip the switch back to dishwasher mode.

Drain the machine. Fill machine to the line. Run 2 cycles to remove the delimer from the machine.