

DELIMING DISH MACHINE

(Redfield/Sisseton/Webster)

(Follow manufacturer's instructions)

*For optimum operation of machine, delime every other week, or as needed)

*An empty dish rack can be run through the machine during a deliming cycle to remove lime from the rack.

PROCEDURE

Remove 2 screws under top front panel by control buttons.

Pull front panel toward yourself and flip the switch to put the machine into the delime mode. Slide the panel back without replacing screws.

Put on heavy duty rubber gloves AND avoid splashing the caustic delimer. With water in the bottom of the dishwasher, add 1 cup of delimer into the water and run machine for about 15-20 minutes.

Shut machine off. Flip the switch back to dishwasher mode and slide panel back and replace screws.

Drain the machine. Fill machine to the line. Run 2 cycles to remove the delimer from the machine.