

# **DISHWASHER OPERATING PROCEDURE**

**(Aberdeen and Redfield)**

- 1. TURN POWER ON.**
- 2. FILL MACHINE TO LINE ON INSIDE BACK WALL OF DISH MACHINE. DEPRESS FILL BUTTON; CHECK WATER LEVEL INSIDE; DEPRESS BUTTON AGAIN UNTIL FILLED TO THE LINE.**
- 3. SET RACK OF DISHES INTO MACHINE MAKING SURE THE TOP AND BOTTOM SPRAY ARMS ARE NOT OBSTRUCTED. CLOSE DOOR AND PRESS RUN.**
- 4. AT END OF DAY, DRAIN MACHINE BY HOLDING DRAIN BUTTON UNTIL ALMOST ALL THE WATER IS OUT OF THE MACHINE. SOME WATER WILL REMAIN IN THE BASKET AREA.**
- 5. REMOVE THE BASKET; EMPTY FOOD PARTICLES INTO GARBAGE. LEAVE BASKET OUT OF MACHINE OVERNIGHT TO AVOID RUST.**
- 6. SHUT DISH MACHINE POWER OFF.**
- 7. TOWEL DRY INSIDE OF DOOR AND FRAME.**
- 8. PROP DOOR OPEN WITH DRY TOWEL TO PREVENT WATER/SCALE BUILD-UP.**